


Handpump installation - Part 1 of 3

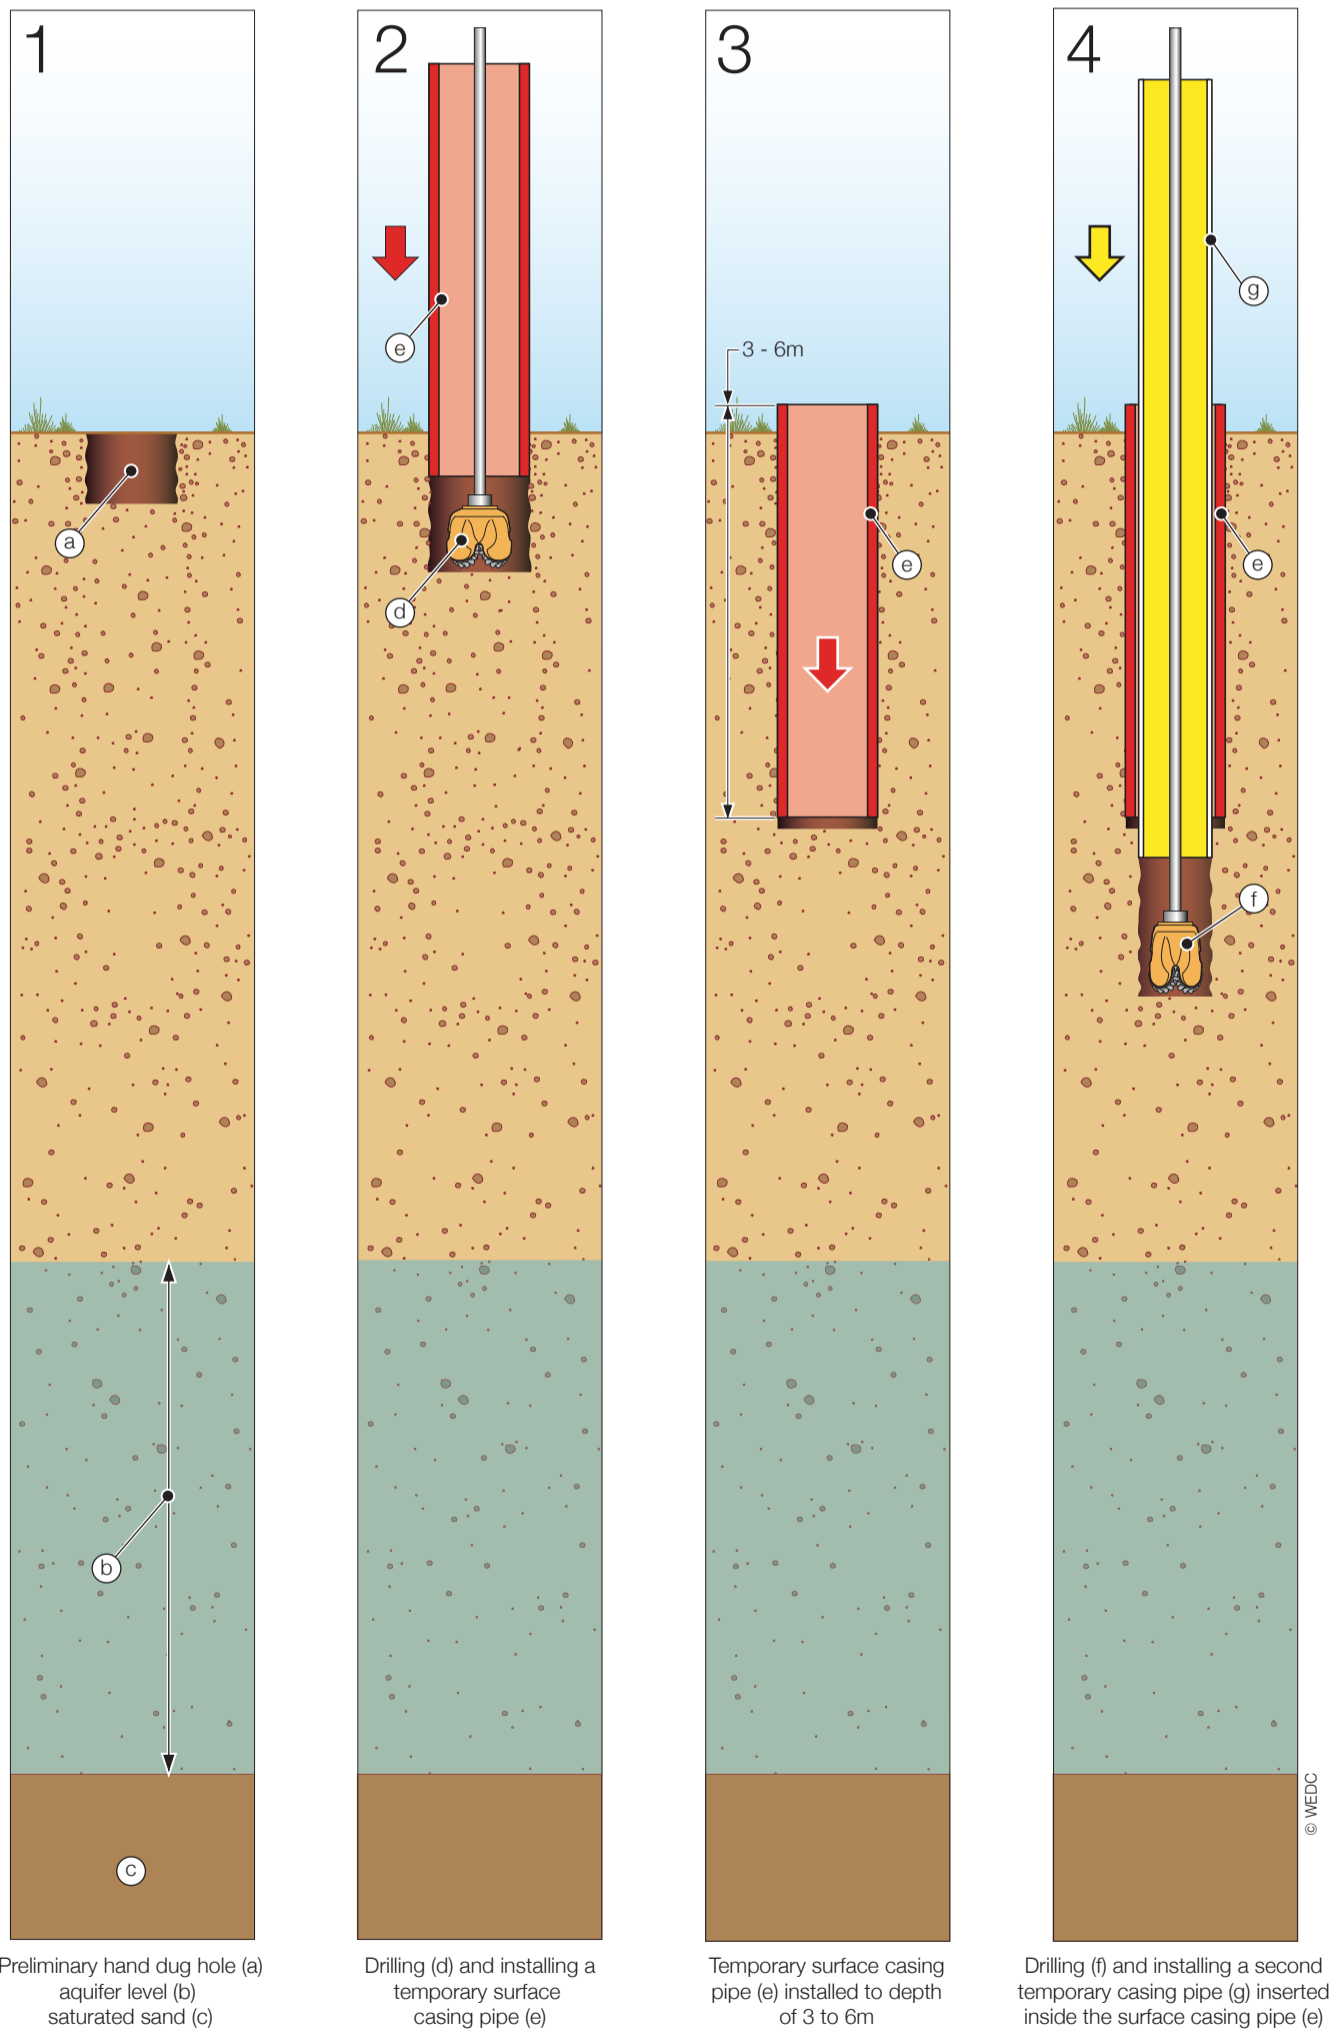

Preliminary hand dug hole (a)
aquifer level (b)
saturated sand (c)

Drilling (d) and installing a
temporary surface
casing pipe (e)

Temporary surface casing
pipe (e) installed to depth
of 3 to 6m

Drilling (f) and installing a second
temporary casing pipe (g) inserted
inside the surface casing pipe (e)

© WEDC