




# Handpump installation - Part 2 of 3

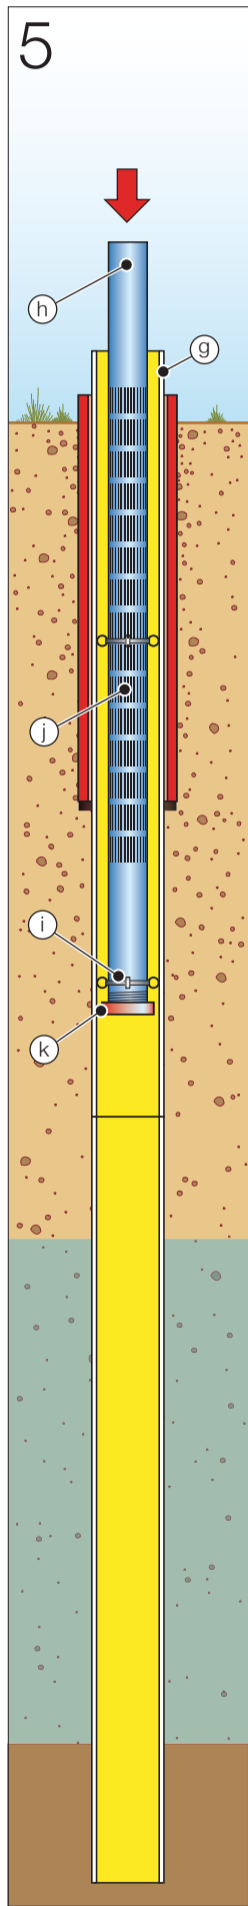


Installing permanent casing pipe (h) with centralisers fitted (i), built-in filter screen (j) and end cap (k), inside second temporary surface pipe (g)

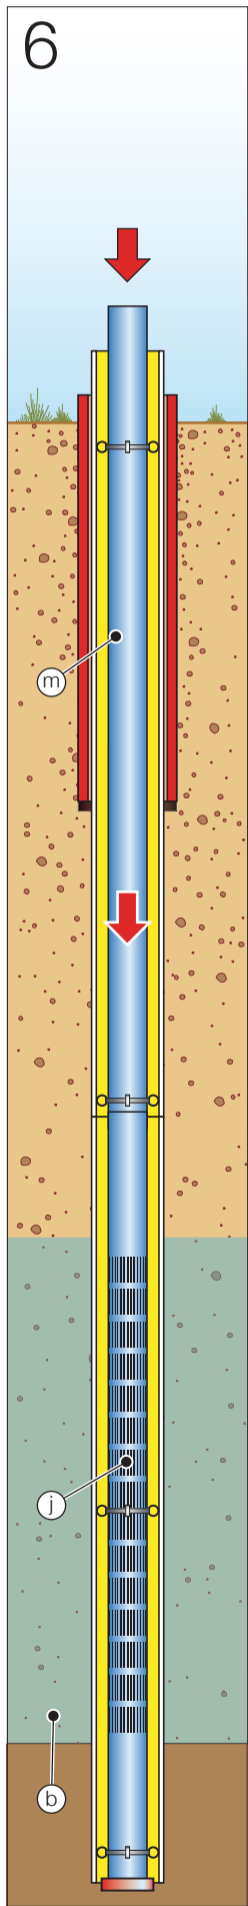

Pipes with screen (j) installed at aquifer level (b), with further plain pipe sections (m) added as required and screwed into previous permanent pipe

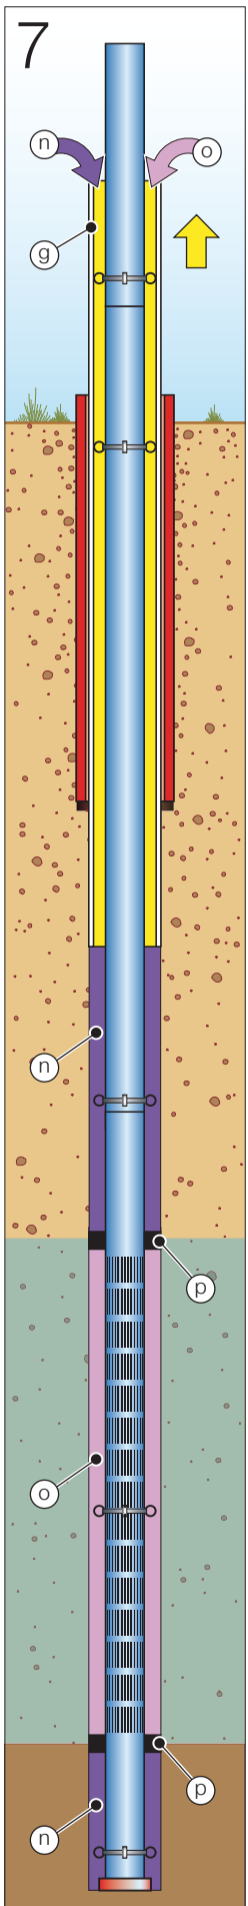

Withdrawing second temporary casing pipe (g) and filling gaps with foundation stabilizer (n), fine gravel (o) all separated by clay seals (p)

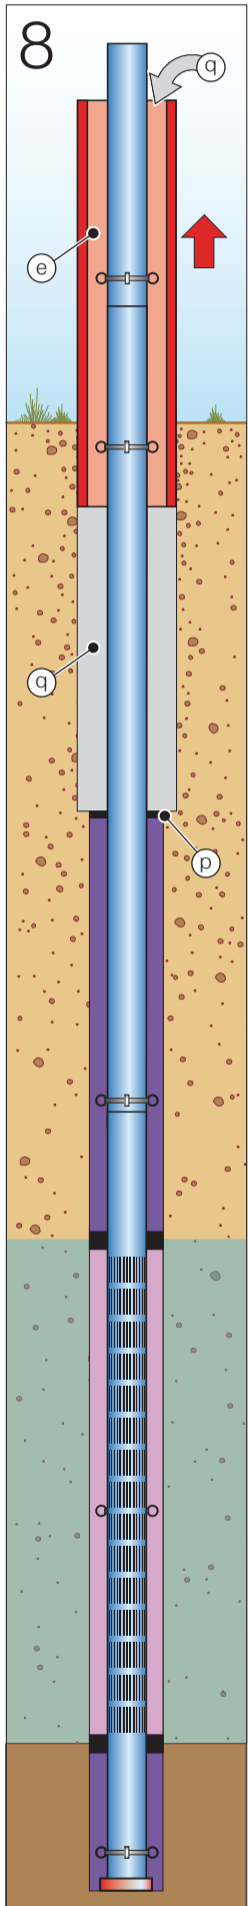

Withdrawing first stage temporary surface casing pipe (e) and filling gap left with either cement grout or expanding clay pellets (q)

© WEDC